


Controlling Electrical Hazards

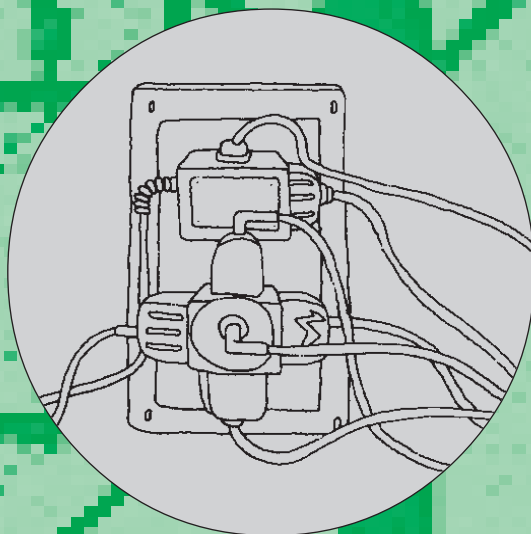

U.S. Department of Labor
Occupational Safety and Health Administration

OSHA 3075
1997 (Revised)



This informational booklet is intended to provide a generic, non-exhaustive overview of a particular standards-related topic. This publication does not itself alter or determine compliance responsibilities, which are set forth in OSHA standards themselves and the *Occupational Safety and Health Act*. Moreover, because interpretations and enforcement policy may change over time, for additional guidance on OSHA compliance requirements, the reader should consult current administrative interpretations and decisions by the Occupational Safety and Health Review Commission and the courts.

Material contained in this publication is in the public domain and may be reproduced, fully or partially, without permission of the Federal Government. Source credit is requested but not required.

This information will be made available to sensory impaired individuals upon request.

Voice phone: (202) 219-8615;

Telecommunications Device for the Deaf (TDD) message referral phone: 1-800-326-2577.

Controlling Electrical Hazards



U.S. Department of Labor
Alexis M. Herman, Secretary

Occupational Safety and Health Administration
Gregory R. Watchman, Acting Assistant Secretary

OSHA 3075
1997 (Revised)

	Page
Introduction	1
How Electricity Acts?	3
How Shocks Occur?	5
Severity of the Shock	6
Burns and Other Injuries	8
Preventing Electrical Hazards	9
Insulation	9
Guarding	10
Grounding	11
Circuit Protection Devices	12
Safe Work Practices	12
Training	13
Overhead Lines	13
Conclusion	16
Other Sources of OSHA Assistance	17
Safety and Health Program Management Guidelines	17
State Programs	17
Free Onsite Consultation	18
Voluntary Protection Programs	19
Training and Education	19
Electronic Information	20
Emergencies	21
OSHA Related Publications	22
States with Approved Plans	23

	Page
OSHA Consultation Project Directory	26
OSHA Area Offices	28
OSHA Regional Offices	30

This booklet provides an overview of basic electrical safety for individuals with little or limited training or familiarity with electrical hazards. The concepts and principles presented will help further an understanding of OSHA's electrical safety standards for general industry, *Title 29 Code of Federal Regulations (CFR), Part 1910.302, Subpart S—Design Safety Standards for Electrical Systems*, and *1910.331 Electrical Safety-Related Work Practices Standard (1990)*.

In general, OSHA's electrical standards are based on the National Fire Protection Associations' Standard NFPA 70E, *Electrical Safety Requirements for Employee Workplaces*, and in turn, from the National Electrical Code (NEC).

OSHA also has electrical standards for construction and maritime,¹ but recommends that employers in these industries follow the general industry electrical standards whenever possible for hazards that are not addressed by their industry-specific standards.

OSHA's electrical standards address concerns that electricity has long been recognized as a serious workplace hazard, exposing employees to such dangers as electric shock, electrocution, burns, fires, and explosions. In 1992, for example, the Bureau of Labor Statistics² reported that 6,210 work-related deaths occurred in private sector workplaces employing 11 workers or more. Six percent of the fatalities, or around 347 deaths, were the direct result of electrocutions at work. What makes these statistics more tragic is that, for the most part, these fatalities could have been easily avoided.


OSHA's electrical standards help minimize these potential hazards by specifying safety aspects in the design and use of

¹ OSHA's Construction Standards, 29 CFR 1926, Subpart K—equivalent to those in Subpart S but contain fewer safety-related work practices—comprise electrical safety requirements. OSHA's Maritime Standards, 29 CFR Parts 1915, 1917, 1918, and 1919 contain fewer electrical requirements.

² *Fatal Workplace Injuries in 1995: A Collection of Data and Analysis*, Table A-15. Bureau of Labor Statistics Report 913. U.S. Department of Labor, Washington, DC.

electrical equipment and systems. The standards cover only those parts of any electrical system that an employee would normally use or contact. For example, the exposed and/or operating elements of an electrical installation—lighting, equipment, motors, machines, appliances, switches, controls, and enclosures—must be constructed and installed so as to minimize workplace electrical dangers.

For employers and employees in the 25 states operating OSHA’s approved workplace safety and health plans,³ their states may be enforcing standards and other procedures that while “at least effective” federal standards are not always identical to federal requirements.

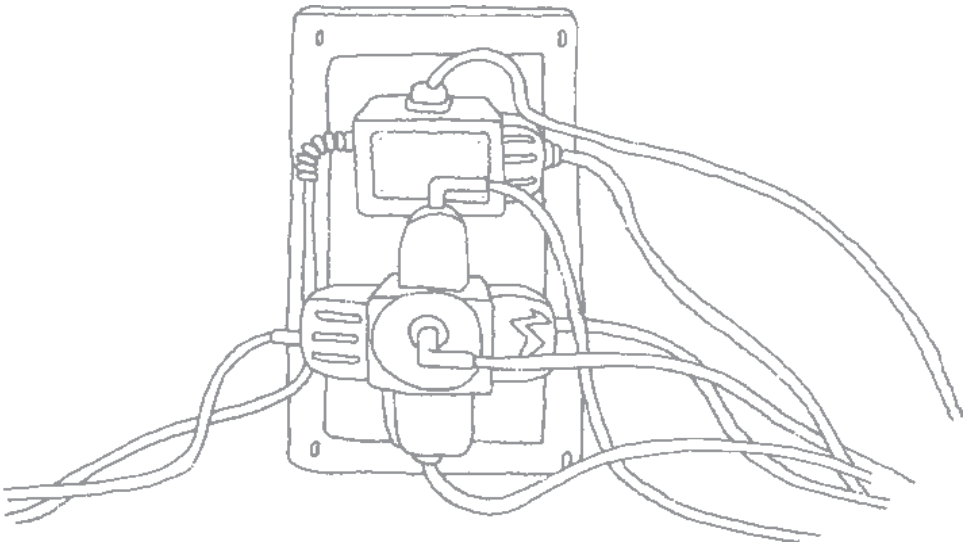

³ Section 18(b), P.L. 95-596, encourages states to develop and operate, under OSHA guidance, job safety and health plans. An OSHA-approved state plan must have safety and health requirements at least as effective as those of Federal OSHA and must adopt, within 6 months of promulgation of federal standards, comparable state standards.

Electricity is essential to modern life, both at home and on the job. Some employees work with electricity directly, as is the case with engineers, electricians, electronic technicians, and power line workers. Others, such as office workers and salespeople, work with it indirectly. As a source of power, electricity is accepted without much thought to the hazards encountered. Perhaps because it has become such a familiar part of our surroundings, it often is not treated with the respect it deserves.


To handle electricity safely, it is necessary to understand how it acts, how it can be directed, what hazards it presents, and how these hazards can be controlled. Operating an electric switch may be considered analogous to turning on a water faucet. Behind the faucet or switch there must be a source of water or electricity, with something to transport it, and with pressure to make it flow. In the case of water, the source is a reservoir or pumping station; the transportation is through pipes; and the force to make it flow is pressure, provided by a pump. For electricity, the source is the power generating station; current travels through electric conductors in the form of wires; and pressure, measured in volts, is provided by a generator.

Resistance to the flow of electricity is measured in ohms and varies widely. It is determined by three factors: the nature of the substance itself, the length and cross-sectional area (size) of the substance, and the temperature of the substance.

Some substances, such as metals, offer very little resistance to the flow of electric current and are called conductors. Other substances, such as bakelite, porcelain, pottery, and dry wood, offer such a high resistance that they can be used to prevent the flow of electric current and are called insulators.

Dry wood has a high resistance, but when saturated with water its resistance drops to the point where it will readily conduct electricity. The same thing is true of human skin.

When it is dry, skin has a fairly high resistance to electric current; but when it is moist, there is a radical drop in resistance. Pure water is a poor conductor, but small amounts of impurities, such as salt and acid (both of which are contained in perspiration), make it a ready conductor. When water is present either in the environment or on the skin, anyone working with electricity should exercise even more caution than they normally would.

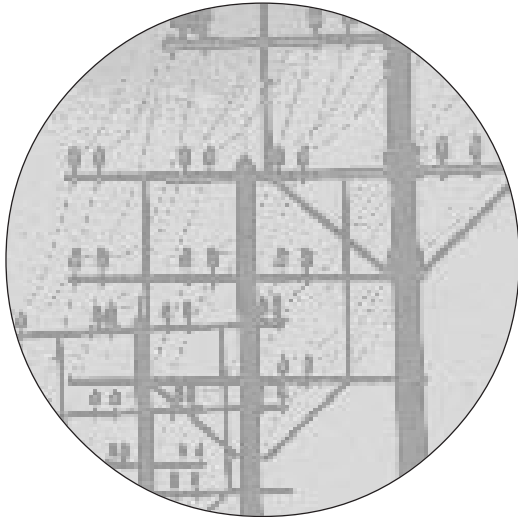

Electricity travels in closed circuits, and its normal route is through a conductor. Electric shock occurs when the body becomes a part of the electric circuit. The current must enter the body at one point and leave at another. Electric shock normally occurs in one of three ways. Individuals—while in contact with the ground—must come in contact with both wires of the electric circuit, one wire of an energized circuit and the ground, or a metallic part that has become “hot” by contact with an energized conductor.

The metal parts of electric tools and machines may become energized if there is a break in the insulation of the tool or machine wiring. The worker using these tools and machines is made less vulnerable to electric shock when there is a low-resistance path from the metallic case of the tool or machine to the ground. This is done through the use of an equipment grounding conductor—a low-resistance wire that causes the unwanted current to pass directly to the ground, thereby greatly reducing the amount of current passing through the body of the person in contact with the tool or machine. If the equipment grounding conductor has been properly installed, it has a low resistance to ground, and the worker is protected.

The severity of the shock received when a person becomes a part of an electric circuit is affected by three primary factors: the amount of current flowing through the body (measured in amperes), the path of the current through the body, and the length of time the body is in the circuit. Other factors that may affect the severity of shock are the frequency of the current, the phase of the heart cycle when shock occurs, and the general health of the person.

The effects of electric shock depend upon the type of circuit, its voltage, resistance, current, pathway through the body, and duration of the contact. Effects can range from a barely perceptible tingle to immediate cardiac arrest. Although there are no absolute limits or even known values that show the exact injury from any given current, the table shows the general relationship between the degree of injury and amount of current for a 60-cycle hand-to-foot path of one second's duration of shock.

The table also illustrates that a difference of less than 100 milliamperes exists between a current that is barely perceptible and one that can kill. Muscular contraction caused by stimulation may not allow the victim to free himself or herself from the circuit, and the increased duration of exposure increases the dangers to the shock victim. For example, a current of 100 milliamperes for 3 seconds is equivalent to a current of 900 milliamperes applied for .03 seconds in causing ventricular fibrillation. The so-called low voltages can be extremely dangerous because, all other factors being equal, the degree of injury is proportional to the length of time the body is in the circuit.

LOW VOLTAGE DOES NOT IMPLY LOW HAZARD!

A severe shock can cause considerably more damage to the body than is visible. For example, a person may suffer internal hemorrhages and destruction of tissues, nerves, and muscles. In addition, shock is often only the beginning in a chain of events. The final injury may well be from a fall, cuts, burns, or broken bones.

Effects of Electric Current in the Human Body

Current	Reaction
1 Milliampere	Perception level. Just a faint tingle.
5 Milliamperes	Slight shock felt; not painful but disturbing. Average individual can let go. However, strong involuntary reactions to shocks in this range can lead to injuries.
6-25 Milliamperes (women)	Painful shock, muscular control is lost.
9-30 Milliamperes (men)	This is called the freezing current or “let-go” range.
50-150 Milliamperes	Extreme pain, respiratory arrest, severe muscular contractions.* Individual cannot let go. Death is possible.
1,000-4,300 Milliamperes	Ventricular fibrillation. (The rhythmic pumping action of the heart ceases.) Muscular contraction and nerve damage occur. Death is most likely.
10,000- Milliamperes	Cardiac arrest, severe burns and probable death.

*If the extensor muscles are excited by the electric shock, the person may be thrown away from the circuit.

Source: W.B. Kouwenhoven, “Human Safety and Electric Shock,” *Electrical Safety Practices*, Monograph, 112, Instrument Society of America, p. 93. (Papers delivered at the third presentation of the Electrical Safety Course given in Wilmington, DE, in November 1968.)

The most common shock-related injury is a burn. Burns suffered in electrical accidents may be of three types: electrical burns, arc burns, and thermal contact burns.

Electrical burns are the result of the electric current flowing through tissues or bone. Tissue damage is caused by the heat generated by the current flow through the body. Electrical burns are one of the most serious injuries you can receive and should be given immediate attention.

Arc or flash burns, on the other hand, are the result of high temperatures near the body and are produced by an electric arc or explosion. They should also be attended to promptly.

Finally, thermal contact burns are those normally experienced when the skin comes in contact with hot surfaces of overheated electric conductors, conduits, or other energized equipment. Additionally, clothing may be ignited in an electrical accident and a thermal burn will result. All three types of burns may be produced simultaneously.

Electric shock can also cause injuries of an indirect or secondary nature in which involuntary muscle reaction from the electric shock can cause bruises, bone fractures, and even death resulting from collisions or falls. In some cases, injuries caused by electric shock can be a contributory cause of delayed fatalities.

In addition to shock and burn hazards, electricity poses other dangers. For example, when a short circuit occurs, hazards are created from the resulting arcs. If high current is involved, these arcs can cause injury or start a fire. Extremely high-energy arcs can damage equipment, causing fragmented metal to fly in all directions. Even low-energy arcs can cause violent explosions in atmospheres that contain flammable gases, vapors, or combustible dusts.

Electrical accidents appear to be caused by a combination of three possible factors—unsafe equipment and/or installation, workplaces made unsafe by the environment, and unsafe work practices. There are various ways of protecting people from the hazards caused by electricity. These include: insulation, guarding, grounding, electrical protective devices, and safe work practices.

Insulation

One way to safeguard individuals from electrically energized wires and parts is through insulation. An insulator is any material with high resistance to electric current.

Insulators—such as glass, mica, rubber, and plastic—are put on conductors to prevent shock, fires, and short circuits. Before employees prepare to work with electric equipment, it is always a good idea for them to check the insulation before making a connection to a power source to be sure there are no exposed wires. The insulation of flexible cords, such as extension cords, is particularly vulnerable to damage.

The insulation that covers conductors is regulated by Subpart S of 29 *Code of Federal Regulations (CFR) Part 1910.302, Design Safety Standards for Electrical Systems*, as published in the *Federal Register* on January 16, 1981.

Subpart S generally requires that circuit conductors (the material through which current flows) be insulated to prevent people from coming into accidental contact with the current. Also, the insulation should be suitable for the voltage and existing conditions, such as temperature, moisture, oil, gasoline, or corrosive fumes. All these factors must be evaluated before the proper choice of insulation can be made.

Conductors and cables are marked by the manufacturer to show the maximum voltage and American Wire Gage size, the type letter of the insulation, and the manufacturer's name or

trademark. Insulation is often color coded. In general, insulated wires used as equipment grounding conductors are either continuous green or green with yellow stripes. The grounded conductors that complete a circuit are generally covered with continuous white or natural gray-colored insulation. The ungrounded conductors, or “hot wires,” may be any color other than green, white, or gray. They are often colored black or red.

Guarding

Live parts of electric equipment operating at 50 volts or more must be guarded against accidental contact. Guarding of live parts may be accomplished by:

- location in a room, vault, or similar enclosure accessible only to qualified persons;
- use of permanent, substantial partitions or screens to exclude unqualified persons;
- location on a suitable balcony, gallery, or platform elevated and arranged to exclude unqualified persons; or
- elevation of 8 feet (2.44 meters) or more above the floor.

Entrances to rooms and other guarded locations containing exposed live parts must be marked with conspicuous warning signs forbidding unqualified persons to enter.

Indoor electric wiring more than 600 volts and that is open to unqualified persons must be made with metal-enclosed equipment or enclosed in a vault or area controlled by a lock. In addition, equipment must be marked with appropriate caution signs.



Grounding

Grounding is another method of protecting employees from electric shock; however, it is normally a secondary protective measure. The term “ground” refers to a conductive body, usually the earth, and means a conductive connection, whether intentional or accidental, by which an electric circuit or equipment is connected to earth or the ground plane. By “grounding” a tool or electrical system, a low-resistance path to the earth is intentionally created. When properly done, this path offers sufficiently low resistance and has sufficient current carrying capacity to prevent the buildup of voltages that may result in a personnel hazard. This does not guarantee that no one will receive a shock, be injured, or be killed. It will, however, substantially reduce the possibility of such accidents—especially when used in combination with other safety measures discussed in this booklet.

There are two kinds of grounds required by *Design Safety Standards for Electrical Systems* (Subpart S). One of these is called the “service or system ground.” In this instance, one wire—called “the neutral conductor” or “grounded conductor”—is grounded. In an ordinary low-voltage circuit, the white (or gray) wire is grounded at the generator or transformer and again at the service entrance of the building. This type of ground is primarily designed to protect machines, tools, and insulation against damage.

To offer enhanced protection to the workers themselves, an additional ground, called the “equipment ground,” must be furnished by providing another path from the tool or machine through which the current can flow to the ground. This additional ground safeguards the electric equipment operator in the event that a malfunction causes the metal frame of the tool to become accidentally energized. The resulting heavy surge of current will then activate the circuit protection devices and open the circuit.

Circuit Protection Devices

Circuit protection devices are designed to automatically limit or shut off the flow of electricity in the event of a ground-fault, overload, or short circuit in the wiring system. Fuses, circuit breakers, and ground-fault circuit interrupters are three well-known examples of such devices.

Fuses and circuit-breakers are over-current devices that are placed in circuits to monitor the amount of current that the circuit will carry. They automatically open or break the circuit when the amount of current flow becomes excessive and therefore unsafe. Fuses are designed to melt when too much current flows through them. Circuit breakers, on the other hand, are designed to trip open the circuit by electro-mechanical means.

Fuses and circuit breakers are intended primarily for the protection of conductors and equipment. They prevent overheating of wires and components that might otherwise create hazards for operators. They also open the circuit under certain hazardous ground-fault conditions.

The ground-fault circuit interrupter, or GFCI, is designed to shutoff electric power within as little as 1/40 of a second. It works by comparing the amount of current going to electric equipment against the amount of current returning from the equipment along the circuit conductors. If the current difference exceeds 6 milliamperes, the GFCI interrupts the current quickly enough to prevent electrocution. The GFCI is used in high-risk areas such as wet locations and construction sites.

Safe Work Practices

Employees and others working with electric equipment need to use safe work practices. These include: deenergizing electric equipment before inspecting or making repairs, using electric tools that are in good repair, using good judgment when working near energized lines, and using appropriate protective

equipment. Electrical safety-related work practice requirements are contained in Subpart S of 29 *CFR* Part 1910, in Sections 1910.331-1910.335.

Training

To ensure that they use safe work practices, employees must be aware of the electrical hazards to which they will be exposed. Employees must be trained in safety-related work practices as well as any other procedures necessary for safety from electrical hazards.

Deenergizing Electrical Equipment. The accidental or unexpected sudden starting of electrical equipment can cause severe injury or death. Before ANY inspections or repairs are made—even on the so-called low-voltage circuits—the current must be turned off at the switch box and the switch padlocked in the OFF position. At the same time, the switch or controls of the machine or other equipment being locked out of service must be securely tagged to show which equipment or circuits are being worked on.

Maintenance employees should be qualified electricians who have been well instructed in lockout procedures. No two locks should be alike; each key should fit only one lock, and only one key should be issued to each maintenance employee. If more than one employee is repairing a piece of equipment, each should lock out the switch with his or her own lock and never permit anyone else to remove it. The maintenance worker should at all times be certain that he or she is not exposing other employees to danger.

Overhead Lines

If work is to be performed near overhead power lines, the lines must be deenergized and grounded by the owner or operator of the lines, or other protective measures must be

provided before work is started. Protective measures (such as guarding or insulating the lines) must be designed to prevent employees from contacting the lines.

Unqualified employees and mechanical equipment must stay at least 10 feet (3.05 meters) away from overhead power lines. If the voltage is more than 50,000 volts, the clearance must be increased by 4 inches (10 centimeters) for each additional 10,000 volts.

When mechanical equipment is being operated near overhead lines, employees standing on the ground may not contact the equipment unless it is located so that the required clearance cannot be violated even at the maximum reach of the equipment.

Protective Equipment. Employees whose occupations require them to work directly with electricity must use the personal protective equipment required for the jobs they perform. This equipment may consist of rubber insulating gloves, hoods, sleeves, matting, blankets, line hose, and industrial protective helmets.


Tools. To maximize his or her own safety, an employee should always use tools that work properly. Tools must be inspected before use, and those found questionable, removed from service and properly tagged. Tools and other equipment should be regularly maintained. Inadequate maintenance can cause equipment to deteriorate, resulting in an unsafe condition.

Tools that are used by employees to handle energized conductors must be designed and constructed to withstand the voltages and stresses to which they are exposed.

Good Judgment. Perhaps the single most successful defense against electrical accidents is the continuous exercising of good judgment or common sense. All employees should be thor-


oughly familiar with the safety procedures for their particular jobs. When work is performed on electrical equipment, for example, some basic procedures are:

1. Have the equipment deenergized.
2. Ensure that the equipment remains deenergized by using some type of lockout and tag procedure.
3. Use insulating protective equipment.
4. Keep a safe distance from energized parts.

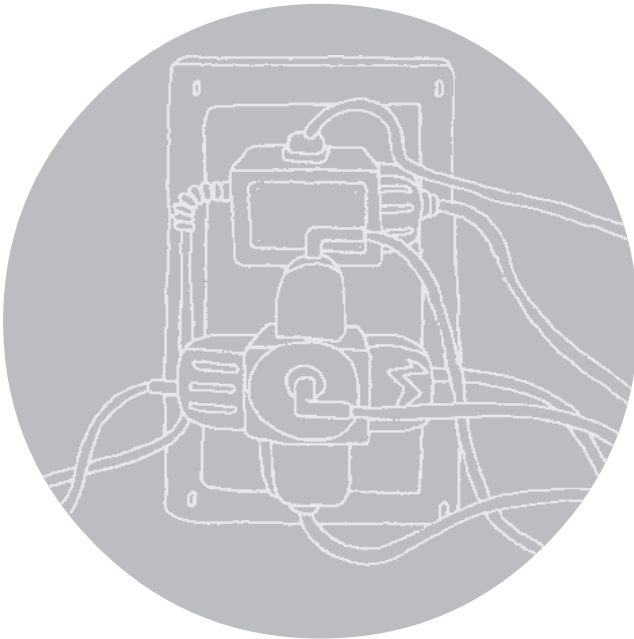

The control of electrical hazards is an important part of every safety and health program. The measures suggested in this booklet should be of help in establishing such a program of control. The responsibility for this program should be delegated to individuals who have a complete knowledge of electricity, electrical work practices, and the appropriate OSHA standards for installation and performance.

Everyone has the right to work in a safe environment. Through cooperative efforts, employers and employees can learn to identify and eliminate or control electrical hazards.

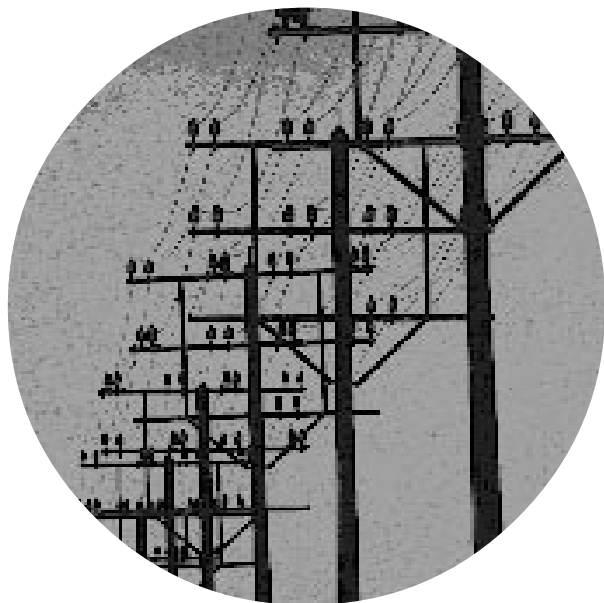

Safety and Health Program Management Guidelines

Effective management of worker safety and health protection is a decisive factor in reducing the extent and severity of work-related injuries and illnesses and their related costs. To assist employers and employees in developing effective safety and health programs, OSHA published recommended *Safety and Health Program Management Guidelines* (*Federal Register* 54(18): 3908-3916, January 26, 1989). These voluntary guidelines apply to all places of employment covered by OSHA.

The guidelines identify four general elements that are critical to the development of a successful safety and health management program:

- Management commitment and employee involvement,
- Worksite hazard analysis,
- Hazard prevention and control, and
- Safety and health training.

The guidelines recommend specific actions under each of these general elements. A single free copy of the guidelines can be obtained from the OSHA Publications Office.

State Programs

The Occupational Safety and Health Act of 1970 encourages states to develop and operate their own job safety and health plans. States with plans approved under section 18(b) of the Act must adopt standards and enforce requirements that are at least as effective as federal requirements. There are currently 25 state plan states and territories: 23 covering both private and public (state and local government) employees and two covering public sector employees only.

Plan states must adopt standards comparable (but not necessarily identical) to the federal within 6 months of a federal standard's promulgation. Until a state standard is promulgated,

OSHA will provide interim enforcement assistance, as appropriate, in these states. A listing of states with approved plans appears at the end of this publication.

Free Onsite Consultation

Free onsite safety and health consultation services are available in all states to employers who want help in establishing and maintaining a safe and healthful workplace. Primarily developed for smaller employers with more hazardous operations, the OSHA Consultation Service is largely funded by OSHA and is delivered by state governments employing professional safety consultants and health consultants. The comprehensive assistance that is offered includes an appraisal of all mechanical systems, physical work practices, and environmental hazards of the workplace, and all aspects of the employer's present job safety and health program. In addition, the service offers assistance to employers in developing and implementing an effective workplace safety and health program that corrects and continuously addresses safety and health concerns.

This program is separate from OSHA's inspection efforts. No penalties are proposed or citations issued for any safety or health problems identified by the consultant. The service is confidential. The employer's name, the firm's name, and any information about the workplace, plus any unsafe or unhealthy working conditions that the consultant uncovers, will not be reported routinely to the OSHA inspection staff. The only obligation is the employer's commitment to correct serious job safety and health hazards in a timely manner. The employer is asked to make this commitment prior to the actual visit.

For more information on consultation services, see the list of state consultation projects at the end of this publication.

Voluntary Protection Programs

The Voluntary Protection Programs (VPP) are designed to recognize and promote effective safety and health program management. In the VPP, management, labor, and OSHA establish cooperative relationships at workplaces that have implemented strong programs. Sites approved for VPP's Star, Merit, and Demonstration programs have met, and must continue to meet, rigorous participation standards. Benefits of VPP participation include improved employee motivation to work safely, leading to better quality and productivity; lost workday case rates that generally are 60 to 80 percent below industry averages; reduced workers' compensation and other injury- and illness-related costs; positive community recognition and interaction; further improvement and revitalization of already good safety and health programs; and partnership with OSHA. VPPs and onsite consultation services, when coupled with an effective enforcement program, expand worker protection to help meet the goals of the OSH Act.

For additional information about the VPP, contact the VPP Manager in your OSHA regional office list at the end of this publication.

Training and Education

OSHA area offices offer a variety of information services, such as publications, audiovisual aids, technical advice, and speakers for special engagements. OSHA's Training Institute in Des Plaines, IL, provides basic and advanced courses in safety and health for federal and state compliance officers, state consultants, federal agency personnel, and private sector employers, employees, and their representatives.

The OSHA Training Institute also has established OSHA Training Institute Education Centers to address the increased demand from the private sector and other federal agencies for its courses. These centers are nonprofit colleges, universi-

ties, and other organizations that have been selected after a competition for participation in the program.

OSHA also provides funds to nonprofit organizations, through grants, to conduct workplace training and education in subjects where OSHA believes there is a lack of workplace training. Grants are awarded annually. Grant recipients are expected to contribute 20 percent of the total grant cost.

For more information on grants, training, and education, contact the OSHA Training Institute, Office of Training and Education, 1555 Times Drive, Des Plaines IL 60018, (847) 297-4810, fax (847) 297-4874.

For further information on any OSHA program, contact your nearest OSHA area or regional office listed at the end of this publication.

Electronic Information

Internet—OSHA standards, interpretations, directives, and additional information are now on the World Wide Web at <http://www.osha.gov>.


CD-ROM—A wide variety of OSHA materials including standards, interpretations, directives, and more can be purchased on CD-ROM from the Government Printing Office.

To order, write to Superintendent of Documents, P.O. Box 371954, Pittsburgh, PA 15250-7954. Specify *OSHA Regulations, Documents and Technical Information on CD-ROM, (ORDT)*, S/N 729-1300000-5. The price is \$38 per year (\$47.50 foreign); single copy \$15.00 (\$18.75 foreign).

Emergencies

For life-threatening situations, call (800) 321-OSHA. Complaints will go immediately to the nearest OSHA area or state office for help.

For further information on any OSHA program, contact your nearest OSHA area or regional office listed at the end of this publication.

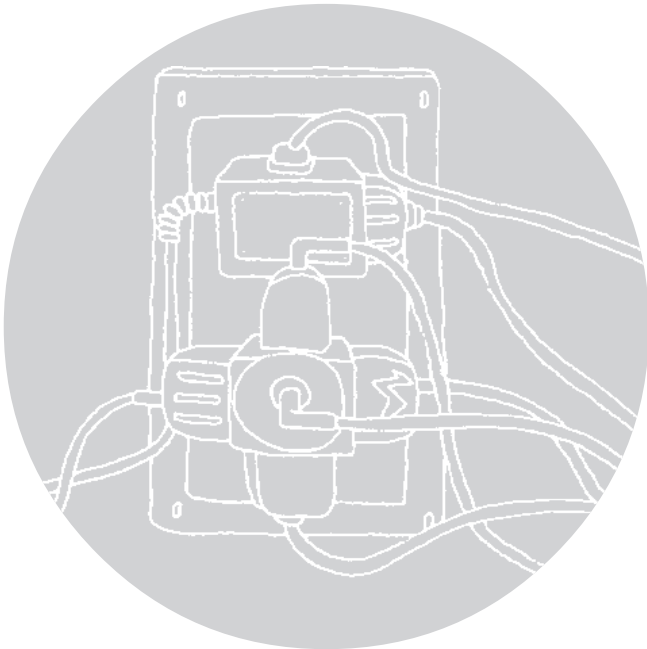

A single, free copy of the following publications can be obtained from the U.S. Department of Labor, OSHA Publications, P.O. Box 37535, Washington, DC 20013-7535, (202) 219-4677, fax (202) 219-9266. Enclose a self-addressed mailing label with your request.

All About OSHA – OSHA 2056

Consultation Services for the Employer – OSHA 3047

Control of Hazardous Energy (Lockout/Tagout) –
OSHA 3120

Employee Workplace Rights – OSHA 3021

*Employer Rights and Responsibilities Following
an OSHA Inspection* – OSHA 3000

Ground-Fault Protection on Construction Sites –
OSHA 3007

How to Prepare for Workplace Emergencies – OSHA 3088

Safety and Health Guide for the Chemical Industry –
OSHA 3091

Shipyard Industry – OSHA 2268

The following publications are available from the Superintendent of Documents, U.S. Government Printing Office, Washington, DC 20402, telephone (202) 512-1800, fax (202) 512-2250. Include GPO Order No. and make checks payable to Superintendent of Documents.

Construction Industry Digest – OSHA 2202
Order 029-016-00151-4. Cost \$2.25

Job Hazard Analysis – OSHA 3071
Order 029-016-00142-5. Cost \$1.00

Commissioner

Alaska Department of Labor
1111 West 8th Street
Room 306
Juneau, AK 99801
(907) 465-2700

Director

Industrial Commission
of Arizona
800 W. Washington
Phoenix, AZ 85007
(602) 542-5795

Director

California Department
of Industrial Relations
45 Fremont Street
San Francisco, CA 94105
(415) 972-8835

Commissioner

Connecticut Department
of Labor
200 Folly Brook Boulevard
Wethersfield, CT 06109
(860) 566-5123

Director

Hawaii Department of Labor
and Industrial Relations
830 Punchbowl Street
Honolulu, HI 96813
(808) 586-8844

Commissioner

Indiana Department of Labor
State Office Building
402 West Washington Street
Room W195
Indianapolis, IN 46204
(317) 232-2378

Commissioner

Iowa Division of Labor Services
1000 E. Grand Avenue
Des Moines, IA 50319
(515) 281-3447

Secretary

Kentucky Labor Cabinet
1047 U.S. Highway, 127 South,
Suite 2
Frankfort, KY 40601
(502) 564-3070

Commissioner

Maryland Division of Labor
and Industry
Department of Labor Licensing
and Regulation
1100 N. Eutaw Street, Room 613
Baltimore, MD 21202-2206
(410) 767-2999

Director

Michigan Department
of Consumer and Industry Services
4th Floor, Law Building
P.O. Box 30004
Lansing, MI 48909
(517) 373-7230

Commissioner

Minnesota Department of Labor
and Industry
443 Lafayette Road
St. Paul, MN 55155
(612) 296-2342

Director

Nevada Division of Industrial
Relations
400 West King Street
Carson City, NV 89710
(702) 687-3032

Secretary

New Mexico Environment
Department
1190 St. Francis Drive
P.O. Box 26110
Santa Fe, NM 87502
(505) 827-2850

Commissioner

New York Department of Labor
W. Averell Harriman State Office
Building -12
Room 500
Albany, NY 12240
(518) 457-2741

Commissioner

North Carolina Department
of Labor
319 Chapanoke Road
Raleigh, NC 27603
(919) 662-4585

Administrator

Department of Consumer
and Business Services
Occupational Safety and Health
Division (OR-OSHA)
350 Winter Street, N.E.
Room 430
Salem, OR 97310
(503) 378-3272

Secretary

Puerto Rico Department
of Labor and Human Resources
Prudencio Rivera Martinez
Building
505 Munoz Rivera Avenue
Hato Rey, PR 00918
(809) 754-2119

Commissioner

South Carolina Department
of Labor, Licensing,
and Regulation
110 Centerview Drive
P.O. Box 11329
Columbia, SC 29211-1329
(803) 734-9594

Commissioner

Tennessee Department of Labor
Attention: Robert Taylor
710 James Robertson Parkway
Nashville, TN 37243-0659
(615) 741-2582

Commissioner

Industrial Commission of Utah
160 East 300 South, 3rd Floor
P.O. Box 146600
Salt Lake City, UT 84114-6600
(801) 530-6898

Commissioner

Vermont Department of Labor
and Industry
National Life Building -
Drawer 20
120 State Street
Montpelier, VT 05620
(802) 828-2288

Commissioner

Virgin Islands Department
of Labor
2131 Hospital Street Box 890
Christiansted St. Croix,
VI 00820-4666
(809) 773-1994

Commissioner

Virginia Department of Labor
and Industry
Powers-Taylor Building
13 South 13th Street
Richmond, VA 23219
(804) 786-2377

Director

Washington Department
of Labor and Industries
General Administration Building
P.O. Box 44001
Olympia, WA 98504-4001
(360) 902-4200

Administrator

Workers' Safety and Compensation
Division (WSC)
Wyoming Department
of Employment
Herschler Building
2nd Floor East
122 West 25th Street
Cheyenne, WY 82002
(307) 777-7786

State	Telephone
Alabama	(205) 348-7136
Alaska	(907) 269-4957
Arizona	(602) 542-5795
Arkansas	(501) 682-4532
California	(415) 972-8515
Colorado	(970) 491-6151
Connecticut	(860) 566-4550
Delaware	(302) 761-8219
District of Columbia	(202) 576-6339
Florida	(904) 488-3044
Georgia	(404) 894-2646
Guam	(671) 475-0136
Hawaii	(808) 586-9100
Idaho	(208) 385-3283
Illinois	(312) 814-2337
Indiana	(317) 232-2688
Iowa	(515) 965-7162
Kansas	(913) 296-7476
Kentucky	(502) 564-6895
Louisiana	(504) 342-9601
Maine	(207) 624-6460
Maryland	(410) 880-4970
Massachusetts	(617) 727-3982
Michigan	(517) 332-1817(H)
.....	(517) 322-1809(S)
Minnesota	(612) 297-2393
Mississippi	(601) 987-3981
Missouri	(573) 751-3403
Montana	(406) 444-6418
Nebraska	(402) 471-4717
Nevada	(702) 486-5016
New Hampshire	(603) 271-2024
New Jersey	(609) 292-2424
New Mexico	(505) 827-4230
New York	(518) 457-2481
North Carolina	(919) 662-4644
North Dakota	(701) 328-5188
Ohio	(614) 644-2246
Oklahoma	(405) 528-1500
Oregon	(503) 378-3272
Pennsylvania	(412) 357-2561

Puerto Rico	(787) 754-2188
Rhode Island	(401) 277-2438
South Carolina	(803) 734-9614
South Dakota	(605) 688-4101
Tennessee	(615) 741-7036
Texas	(512) 440-3809
Utah	(801) 530-7606
Vermont	(802) 828-2765
Virginia	(804) 786-6359
Virgin Islands	(809) 772-1315
Washington	(360) 902-5638
West Virginia	(304) 558-7890
Wisconsin	(608) 266-8579(H)
.....	(414) 521-5063(S)
Wyoming	(307) 777-3646

(H) - Health

(S) - Safety

Area	Telephone
Albany, NY	(518) 464-4338
Albuquerque, NM	(505) 248-5302
Allentown, PA	(610) 776-0592
Anchorage, AK	(907) 271-5152
Appleton, WI	(414) 734-4521
Austin, TX	(512) 916-5783
Avenel, NJ	(908) 750-3270
Baltimore, MD	(410) 962-2840
Bangor, ME	(207) 941-8177
Baton Rouge, LA	(504) 389-0474
Bayside, NY	(718) 279-9060
Bellevue, WA	(206) 553-7520
Billings, MT	(406) 247-7494
Birmingham, AL	(205) 731-1534
Bismarck, ND	(701) 250-4521
Boise, ID	(208) 334-1867
Bowmansville, NY	(716) 684-3891
Braintree, MA	(617) 565-6924
Bridgeport, CT	(203) 579-5581
Calumet City, IL	(708) 891-3800
Carson City, NV	(702) 885-6963
Charleston, WV	(304) 347-5937
Cincinnati, OH	(513) 841-4132
Cleveland, OH	(216) 522-3818
Columbia, SC	(803) 765-5904
Columbus, OH	(614) 469-5582
Concord, NH	(603) 225-1629
Corpus Christi, TX	(512) 888-3420
Dallas, TX	(214) 320-2400
Denver, CO	(303) 844-5285
Des Plaines, IL	(847) 803-4800
Des Moines, IA	(515) 284-4794
Englewood, CO	(303) 843-4500
Erie, PA	(814) 833-5758
Fort Lauderdale, FL	(954) 424-0242
Fort Worth, TX	(817) 428-2470
Frankfort, KY	(502) 227-7024
Harrisburg, PA	(717) 782-3902
Hartford, CT	(860) 240-3152
Hasbrouck Heights, NJ	(201) 288-1700
Guaynabo, PR	(787) 277-1560
Honolulu, HI	(808) 541-2685

Houston, TX	(281) 286-0583
Houston, TX	(281) 591-2438
Indianapolis, IN	(317) 226-7290
Jackson, MS	(601) 965-4606
Jacksonville, FL	(904) 232-2895
Kansas City, MO	(816) 483-9531
Lansing, MI	(517) 377-1892
Little Rock, AR	(501) 324-6291
Lubbock, TX	(806) 472-7681
Madison, WI	(608) 264-5388
Marlton, NJ	(609) 757-5181
Methuen, MA	(617) 565-8110
Milwaukee, WI	(414) 297-3315
Minneapolis, MN	(612) 348-1994
Mobile, AL	(334) 441-6131
Nashville, TN	(615) 781-5423
New York, NY	(212) 466-2482
Norfolk, VA	(804) 441-3820
North Aurora, IL	(630) 896-8700
North Syracuse, NY	(315) 451-0808
Oklahoma City, OK	(405) 231-5351
Omaha, NE	(402) 221-3182
Parsippany, NJ	(201) 263-1003
Peoria, IL	(309) 671-7033
Philadelphia, PA	(215) 597-4955
Phoenix, AZ	(602) 640-2007
Pittsburgh, PA	(412) 644-2903
Portland, OR	(503) 326-2251
Providence, RI	(401) 528-4669
Raleigh, NC	(919) 856-4770
Sacramento, CA	(916) 566-7470
Salt Lake City, UT	(801) 487-0073
San Diego, CA	(619) 557-2909
Savannah, GA	(912) 652-4393
Smyrna, GA	(770) 984-8700
Springfield, MA	(413) 785-0123
St. Louis, MO	(314) 425-4249
Tampa, FL	(813) 626-1177
Tarrytown, NY	(914) 524-7510
Toledo, OH	(419) 259-7542
Tucker, GA	(770) 493-6644
Westbury, NY	(516) 334-3344
Wichita, KS	(316) 269-6644
Wilkes-Barre, PA	(717) 826-6538
Wilmington, DE	(302) 573-6115

Region I**(CT,* MA, ME, NH, RI, VT*)**

JFK Federal Building
Room E-340
Boston, MA 02203
Telephone: (617) 565-9860

Region II**(NJ, NY,* PR,* VI*)**

201 Varick Street
Room 670
New York, NY 10014
Telephone: (212) 337-2378

Region III**(DC, DE, MD,* PA, VA,* WV)**

Gateway Building, Suite 2100
3535 Market Street
Philadelphia, PA 19104
Telephone: (215) 596-1201

Region IV**(AL, FL, GA, KY,* MS, NC,
SC,* TN*)**

Atlanta Federal Center
61 Forsyth Street, S.W., Room
6T50
Atlanta, GA 30303
Telephone: (404) 562-2300

Region V**(IL, IN,* MI,* MN,* OH, WI)**

230 South Dearborn Street
Room 3244
Chicago, IL 60604
Telephone: (312) 353-2220

Region VI**(AR, LA, NM,* OK, TX)**

525 Griffin Street
Room 602
Dallas, TX 75202
Telephone: (214) 767-4731

Region VII**(IA,* KS, MO, NE)**

City Center Square
1100 Main Street, Suite 800
Kansas City, MO 64105
Telephone: (816) 426-5861

Region VIII**(CO, MT, ND, SD, UT,* WY*)**

1999 Broadway, Suite 1690
Denver, CO 80202-5716
Telephone: (303) 844-1600

Region IX**(American Samoa, AZ,* CA,*
Guam, HI,* NV,* Trust Territo-
ries of the Pacific)**

71 Stevenson Street
Room 420
San Francisco, CA 94105
Telephone: (415) 975-4310

Region X**(AK,* ID, OR,* WA*)**

1111 Third Avenue
Suite 715
Seattle, WA 98101-3212
Telephone: (206) 553-5930

*These states and territories operate their own OSHA-approved job safety and health programs (Connecticut and New York plans cover public employees only). States with approved programs must have a standard that is identical to, or at least as effective as, the federal standard.